

INSTALLATION MANUAL

Single Package Air Conditioner with Gas Heat

Models: PCG4 Series

3 ton to 5 ton - 460 V - Three-Phase



Assembled at a facility with
an ISO 9001:2015-certified
Quality Management
System



List of sections

General information	1	Operation	14
Safety	1	R-410A quick reference guidelines	19
Model number nomenclature	2	Typical wiring diagrams	20
Installation	3	Start up sheet	23
Airflow performance	13		

List of figures

Component location	4	Flue vent outlet air hood	11
Center of gravity location	6	Gas valve	17
Unit dimensions	6	Reading gas pressure	18
Bottom duct dimensions (in.)	7	Measuring external static pressure	18
Rear duct dimensions (in.)	7	Connection wiring diagram	20
Typical field control wiring diagram for gas heat - AC models	8	Ladder wiring diagram	21
Typical field power wiring diagram	8		

List of tables

Unit limitations	3	High altitude gas orifice sizing	11
Application limitations	3	Natural gas application data	12
Weights and dimensions	5	Propane (LP) gas application data	12
Unit dimensions	6	Airflow performance - side duct application	13
Unit clearances	6	Additional static resistance	14
Electrical data	8	Inlet gas pressure range	17
Physical data	9	Nominal manifold pressure	17
Natural gas pipe sizing chart	10	Gas rate (ft ³ /h)	19
Propane (LP) gas pipe sizing chart	10		

Section I: General information

These are electric cooling/gas heating units designed for outdoor installation. Only gas piping, electric power, and duct connections are required at the point of installation.

The gas-fired heaters have spark ignition.

The refrigerant system is fully charged with R-410A refrigerant, tested, and factory sealed.

Section II: Safety



This is a safety alert symbol. When you see this symbol on labels or in manuals, be alert to the potential for personal injury.

Understand and pay particular attention to the signal words **DANGER**, **WARNING**, or **CAUTION**.

DANGER indicates an **imminently** hazardous situation, which, if not avoided, **will result in death or serious injury**.

WARNING indicates a **potentially** hazardous situation, which, if not avoided, **could result in death or serious injury**.

CAUTION indicates a **potentially** hazardous situation, which, if not avoided **may result in minor or moderate injury**. It is also used to

alert against unsafe practices and hazards involving only property damage.

⚠ WARNING

Improper installation may create a condition where the operation of the product could cause personal injury or property damage. Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Failure to carefully read and follow all instructions in this manual can result in furnace malfunction, death, personal injury, and/or property damage. Only a qualified contractor, installer, or service agency should install this product.

⚠ CAUTION

This product must be installed in strict compliance with the installation instructions and any applicable local, state, and national codes including, but not limited to building, electrical, and mechanical codes.

⚠ WARNING

Before performing service or maintenance operations on unit, turn off main power switch to unit. Electrical shock could cause personal injury. Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information consult a qualified installer, service agency, or the gas supplier.

⚠ CAUTION

This system uses R-410A refrigerant, which operates at higher pressures than R-22. No other refrigerant may be used in this system. Gage sets, hoses, refrigerant containers, and recovery systems must be designed to handle R-410A. If you are unsure, consult the equipment manufacturer. Failure to use R-410A compatible servicing equipment may result in property damage or injury.

Due to system pressure, moving parts, and electrical components, installation and servicing of air conditioning equipment can be hazardous. Only qualified, trained service personnel must install, repair, or service this equipment. Untrained personnel can perform the basic maintenance functions of cleaning coils and filters and replacing filters.

⚠ WARNING

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

What to do if you smell gas:

1. Do not try to light any appliance.
2. Do not touch any electrical switch; do not use any phone in your building.
3. Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
4. If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

Observe all precautions in the literature, labels, and tags accompanying the equipment when working on air conditioning equipment. Ensure to follow all other applicable safety precautions and codes including ANSI Z223.1 or CSA-B149.1- latest edition.

Wear safety glasses and work gloves. Use quenching cloth and have a fire extinguisher available during brazing operations.

Section III: Model number nomenclature

Model family	PCG	PHE = packaged heat pump with electric heat PCG = packaged AC with gas heat PHG = packaged heat pump with gas heat PCE = packaged AC with electric heat
Nominal cooling efficiency	4	4 = standard efficiency 6 = high efficiency
Cabinet size	A	A = small, 35.75 in. x 51.25 in. B = large, 45.75 in. x 51.25 in.
Nominal air conditioning cooling capacity Btu/h x 1000	36	24 = 24,000 Btu/h 30 = 30,000 Btu/h 36 = 36,000 Btu/h 42 = 42,000 Btu/h 48 = 48,000 Btu/h 60 = 60,000 Btu/h
Gas heating input Btu/h x 1000	050	050 = 50,000 Btu/h input 065 = 65,000 Btu/h input 075 = 75,000 Btu/h input 100 = 100,000 Btu/h input 125 = 125,000 Btu/h input blank = electric heat
Voltage-phase-frequency	4	2 = 208/230-1-60 3 = 208/230-3-60 4 = 460-3-60
NOx approval	X	X = Low NOx blank = not Low NOx
Generation level	4	1 = first generation 2 = second generation 3 = third generation 4 = fourth generation
Revision level	A	A = original release B = second release

Nomenclature example: PCG4A360504X4A is a packaged air conditioner with gas heat, standard efficiency, small cabinet, 3 ton, single-stage heat, 50,000 Btu/h gas heat, 460 V, three-phase, low NOx model, fourth generation, original release.

Section IV: Installation

Installation safety information

Read these instructions before continuing this appliance installation. This is an outdoor combination heating and cooling unit. The installer must ensure that these instructions are made available to the consumer with instructions to retain them for future reference.

- Refer to the unit rating plate for the approved type of gas for this product.
- Install this unit only in a location and position as specified on page 4 of these instructions.
- Never test for gas leaks with an open flame. Use commercially available soap solution made specifically for the detection of leaks when checking all connections, as specified on page 10 of these instructions.
- Always install unit to operate within the unit's intended temperature rise range with the duct system and within the allowable external static pressure range, as specified on the unit name/rating plate and in Table 7 of these instructions.
- This equipment is not to be used for temporary heating of buildings or structures under construction.

⚠ WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow the safety warning exactly could result in serious injury, death, or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury, or loss of life.

Limitations

These units must be installed in accordance with the following:

In the United States:

- National Electrical Code, ANSI/NFPA No. 70 - Latest Edition
- National Fuel Gas Code, ANSI Z223.1 - Latest Edition
- Gas-Fired Central Furnace Standard, ANSI Z21.47a. - Latest Edition
- Local building codes
- Local gas utility requirements

In Canada:

- Canadian Electrical Code, CSA C22.1
- Installation Codes, CSA - B149.1
- Local plumbing and wastewater codes
- Other applicable local codes

See the unit application data in this document.

After installation, gas-fired units must be adjusted to obtain a temperature rise within the range specified on the unit rating plate.

If it is necessary to add components to a unit to meet local codes, installation is done at the dealer's and customer's expense.

The size of the unit for proposed installation must be based on heat loss/heat gain calculation made according to the methods of Air Conditioning Contractors of America (ACCA).

This furnace is not to be used for temporary heating of buildings or structures under construction.

Table 1: Unit limitations

Model	Unit voltage	Unit limitations		
		Applied voltage		Outdoor DB temperature
		Minimum	Maximum	Maximum (°F)
PCG4A36	460-3-60	432	504	125
PCG4B48				
PCG4B60				

Table 2: Application limitations

Packaged equipment series	Air temperature at outdoor coil (°F)		Air temperature at indoor coil (°F)	
	Minimum	Maximum	Minimum	Maximum
	DB cool	DB cool	WB cool	WB cool
	PCG4	55	125	57

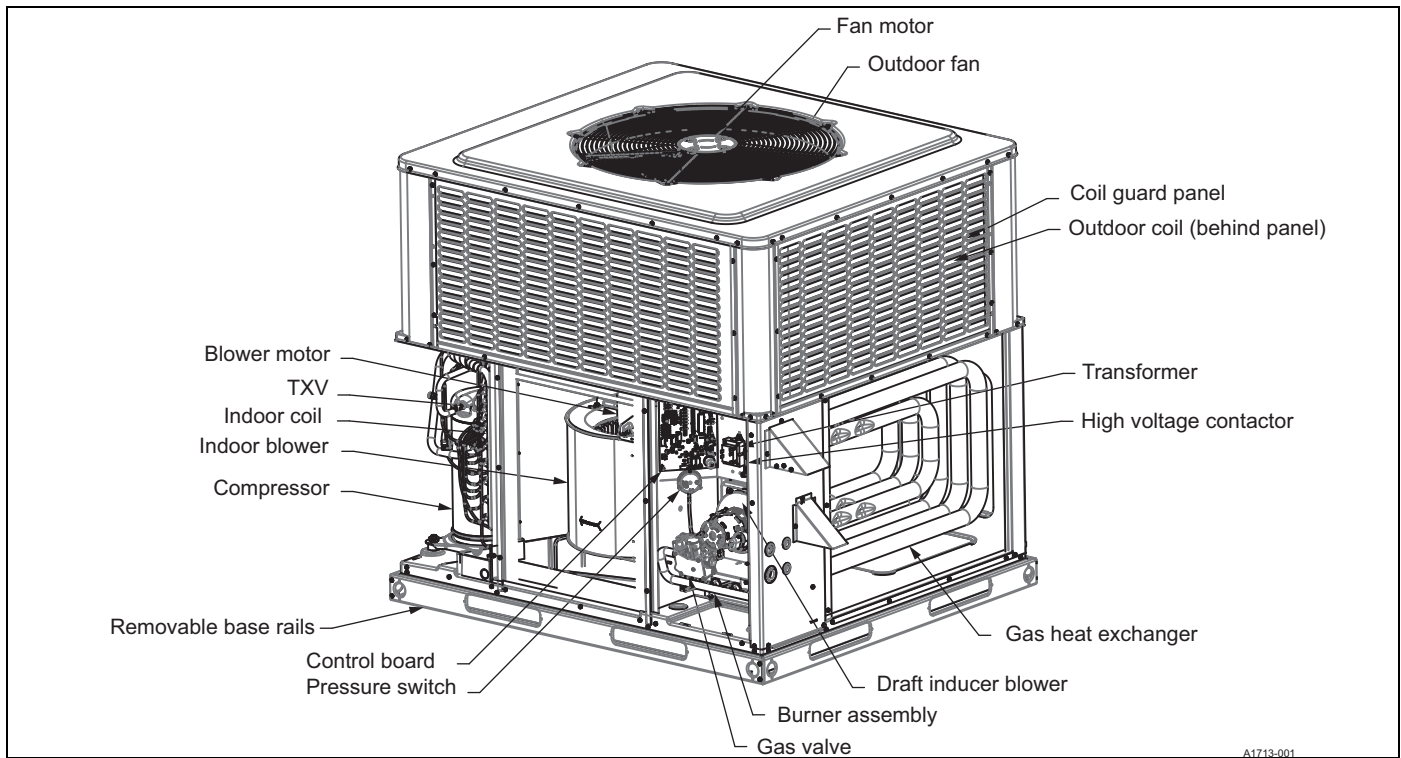


Figure 1: Component location

Location

Use the following guidelines to select a suitable location for these units:

- Unit is designed for **outdoor installation** only.
- Outdoor coils must have an unlimited supply of air. Where a choice of location is possible, position the unit on either north or east side of building.
- Suitable for mounting on roof curb.

⚠ WARNING

Do not attach supply and return duct work to the bottom of the unit base pan as the drain pan could be compromised.

- For ground level installation, use a level pad or slab. The thickness and size of the pad or slab used must meet local codes and unit weight. Do not tie the slab to the building foundation.
- Roof structures must be able to support the weight of the unit and its options/accessories. Unit must be installed on a solid, level roof curb or appropriate angle iron frame.
- Maintain level tolerance to 1/8 in. across the entire width and length of unit.

⚠ WARNING

Excessive exposure of this unit to contaminated combustion air may result in equipment damage or personal injury. Typical contaminants include: permanent wave solution, chlorinated waxes and cleaners, chlorine-based swimming pool chemicals, water softening chemicals, carbon tetrachloride, Halogen type refrigerants, cleaning solvents (e.g. perchloroethylene), printing inks, paint removers, varnishes, hydrochloric acid, cements and glues, anti-static fabric softeners for clothes dryers, masonry acid washing materials.

Clearances

All units require specific clearances for proper operation and service. Installer must make provisions for adequate combustion and ventilation air in accordance with Section 5.3 of *Air for Combustion and Ventilation of the National Fuel Gas Code, ANSI Z223.1 – Latest Edition* (in U.S.),

Gas Installation Codes, CSA-B149.1 (in Canada) - Latest Edition, and/or applicable provisions of local building codes. See Table 5 for clearances required for combustible construction, servicing, and correct unit operation.

⚠ WARNING

Do not permit overhanging structures or shrubs to obstruct outdoor air discharge outlet, combustion air inlet, or vent outlets.

Rigging and handling

⚠ CAUTION

All panels must be secured in place when the unit is lifted. The outdoor coils should be protected from rigging cable damage with plywood or other suitable material.

⚠ CAUTION

If a unit is to be installed on a roof curb other than a Ducted Systems roof curb, gasket or sealant must be applied to all surfaces that come in contact with the unit underside.

exercise care when moving the unit. do not remove any packaging until the unit is near the place of installation. rig the unit by attaching chain or cable slings to the lifting holes provided in the base rails. spreader bars whose length exceeds the largest dimension across the unit **MUST** be used across the top of the unit.

⚠ CAUTION

Before lifting, make sure the unit weight is distributed equally on the rigging cables so it will lift evenly.

Units can be moved or lifted with a forklift. Slotted openings in the base rails are provided for this purpose.

Table 3: Weights and dimensions

Model	Weight (lb)		Center of gravity		Four-point load location (lb)			
	Shipping	Operating	X	Y	A	B	C	D
PCG4A36050	364	359	28	15	123	84	79	73
PCG4A36075	384	379	27	16	121	92	85	81
PCG4A36100	388	383	27	16	120	95	87	81
PCG4B48065	455	450	28	18	165	107	99	79
PCG4B48100	461	456	28	18	163	110	99	84
PCG4B48125	465	460	28	18	163	112	101	84
PCG4B60065	474	469	27	18	167	118	102	82
PCG4B60100	480	475	27	18	165	121	102	87
PCG4B60125	484	479	27	18	165	122	104	88

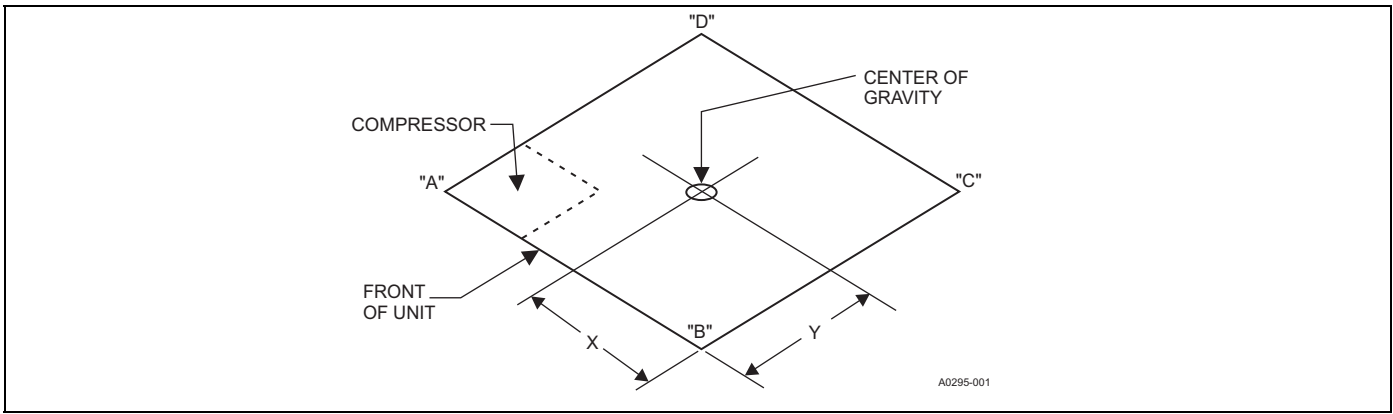


Figure 2: Center of gravity location

Table 4: Unit dimensions

Model	Dimensions (in.)		
	A	B	C
PCG4A36	51 1/4	35 3/4	47
PCG4B48		45 3/4	47
PCG4B60		45 3/4	50

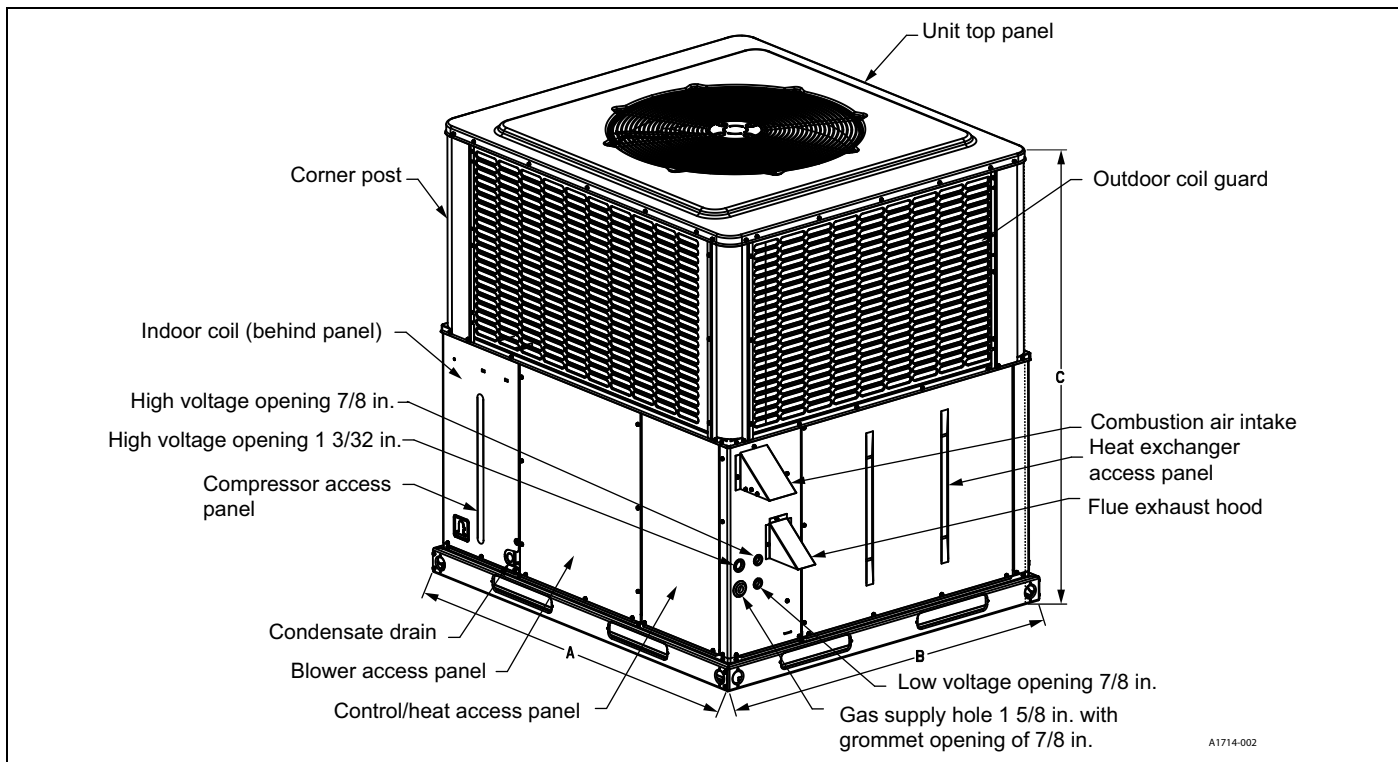


Figure 3: Unit dimensions

Table 5: Unit clearances^{1,2}

Direction	Distance (in.)	Direction	Distance (in.)
Top ³	36	Power entry (right side)	36
Side opposite ducts	36	Left side	24
Duct panel	0	Bottom ⁴	1

1. A 1 in. clearance must be provided between any combustible material and the supply air ductwork.
2. The products of combustion must not be allowed to accumulate within a confined space and recirculate.
3. Units must be installed outdoors. Overhanging structure or shrubs must not obstruct the outdoor air discharge outlet.
4. Units can be installed on combustible materials made from wood or class A, B, or C roof covering materials if factory base rails are left in place as shipped.

Ductwork

NOTICE

All units are shipped in the horizontal supply/return configuration. It is important to reduce the possibility of any air leakage through the bottom duct covers (resulting from cut, torn, or rolled gasket) due to improper handling or shipping processes. To ensure a good tight seal, it is recommended that silicone caulk and/or foil tape be applied along the cover edges.

These units are adaptable to downflow use. To convert to downflow, use the following steps:

1. Remove the duct covers found in the bottom return and supply air duct openings.
2. Install the duct covers (removed in preceding step) to the rear supply and return air duct openings.
3. Seal the duct covers with silicone caulk.

Ductwork must be designed and sized according to the methods of the Air Conditioning Contractors of America (ACCA), as set forth in their Manual D.

Use a closed return duct system. This does not preclude use of economizers or ventilation air intake. It is best practice to use flexible joints in the supply and return duct work to minimize the transmission of vibration and noise.

NOTICE

Be sure to note supply and return openings.

See Figure 4 and Figure 5 for information concerning rear and bottom supply and return air duct openings.

Filters

Correct filter size is important. Filter size, type, and pressure drop must always be considered during duct system design.

It is the responsibility of the installer to secure a filter in the return air ductwork or use the filter rack kit shipped with all three-phase models.

A filter rack kit is included with all three-phase units.

Always use filters and keep filters clean. When filters become dirt laden, insufficient air is delivered by the blower, decreasing your unit's efficiency and increasing operating costs and wear-and-tear on the unit and controls.

Check filters monthly. This is especially important because the unit can be used for both heating and cooling.

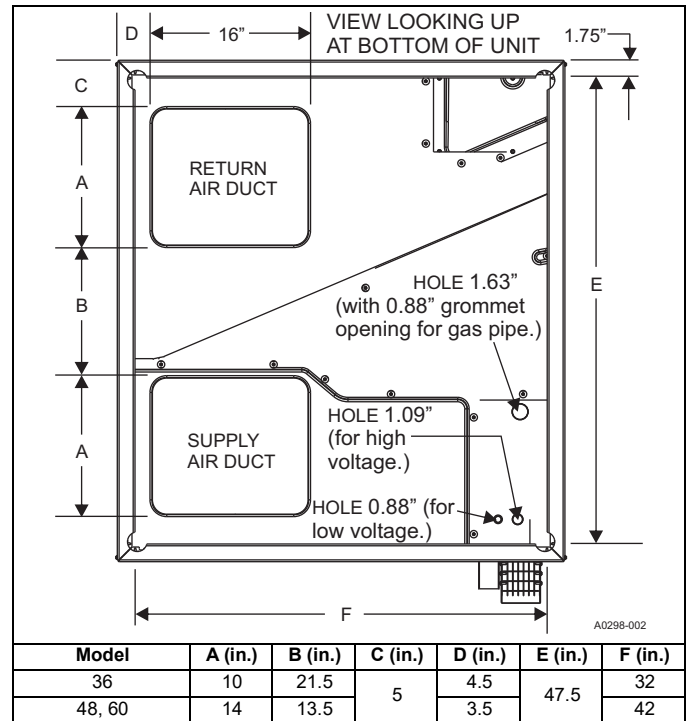


Figure 4: Bottom duct dimensions (in.)

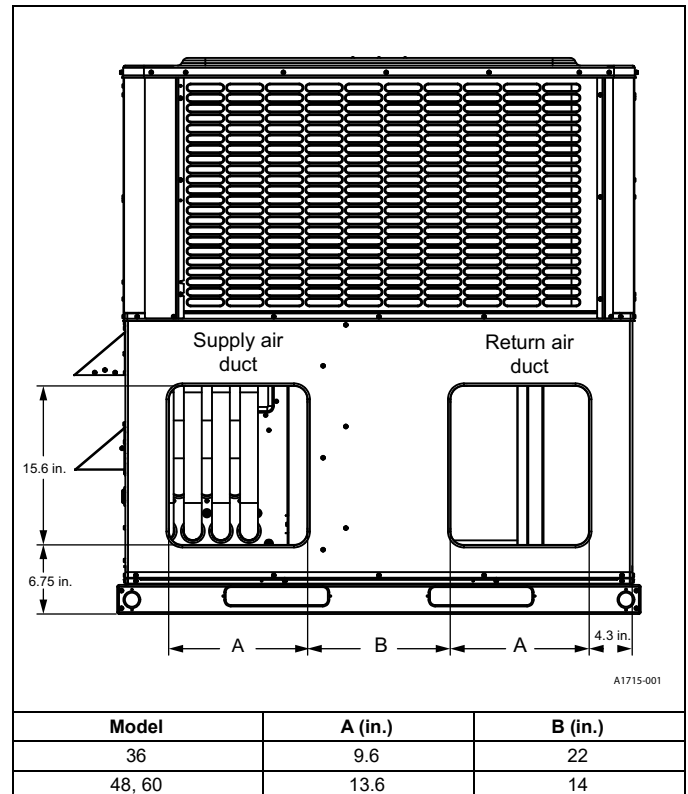


Figure 5: Rear duct dimensions (in.)

Note: See Figure 3 for side hole sizes of electrical and gas lines.

Condensate drain

A condensate trap must be installed in the condensate drain. The plumbing must conform to local codes.

▲ CAUTION

Hand tighten only.

Service access

▲ WARNING

Wear safety glasses and gloves when handling refrigerants. Failure to follow this warning can cause serious personal injury.

Access to all serviceable components is provided at the following locations:

- Coil guards
- Unit top panel
- Corner posts
- Blower access panel
- Control access panel
- Indoor coil access panel
- Compressor access panel
- Heat exchanger access panel

See Figure 3 for the location of these access locations and see Table 5 for minimum clearances.

▲ CAUTION

This system uses R-410A refrigerant, which operates at higher pressures than R-22. No other refrigerant may be used in this system. Gage sets, hoses, refrigerant containers, and recovery systems must be designed to handle R-410A. If you are unsure, consult the equipment manufacturer. Failure to use R-410A compatible servicing equipment may result in property damage or injury.

See Figure 14 for the R-410A Quick Reference Guide.

Thermostat

Locate the room thermostat on an inside wall approximately 60 in. above the floor, where it is not subject to drafts, sun exposure, or heat from electrical fixtures or appliances. Use sealant behind the thermostat to prevent air infiltration. Follow the manufacturer instructions enclosed with the thermostat for general installation procedures. Use color coded insulated wires (minimum 18 AWG) to connect the thermostat to the unit. See Figure 6. Do not use power-stealing thermostats.

Power and control wiring

Field wiring to the unit must conform to provisions of the current NEC ANSI/NFPA No. 70 or CEC and/or local ordinances. The unit must be

electrically grounded in accordance with local codes or, in their absence, with the NEC/CEC. Voltage tolerances that must be maintained at the compressor terminals during starting and running conditions are indicated on the unit rating plate and in Table 1.

The wiring entering the cabinet must be provided with mechanical strain relief.

A fused disconnect switch must be field provided for the unit. If any of the wire supplied with the unit must be replaced, replacement wire must be of the type shown on the wiring diagram.

Electrical service must be sized correctly to carry the load. Each unit must be wired with a separate branch circuit fed directly from the main distribution panel and correctly fused.

See Figure 6 and Figure 7 for typical field wiring and refer to the appropriate unit wiring diagram for control circuit and power wiring information.

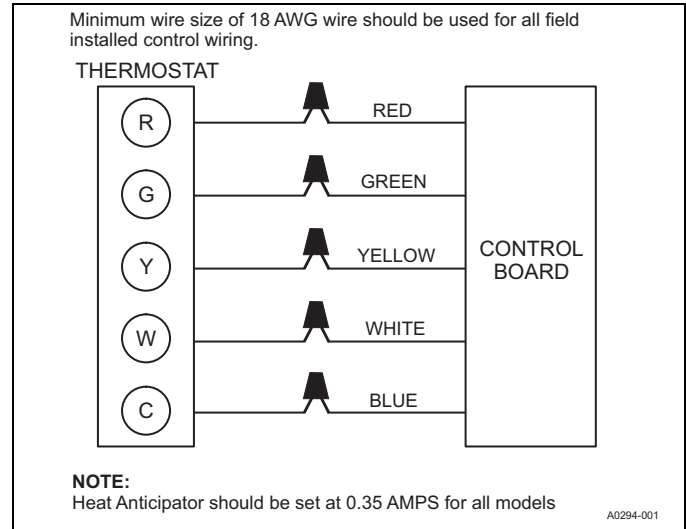


Figure 6: Typical field control wiring diagram for gas heat - AC models

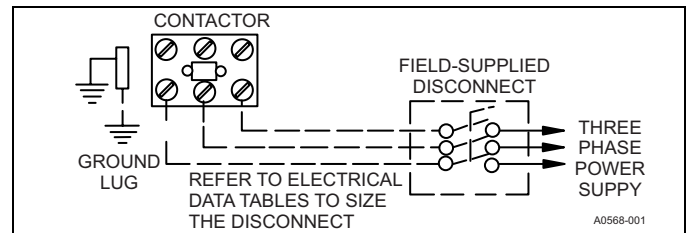


Figure 7: Typical field power wiring diagram

Table 6: Electrical data

Model	Voltage	Compressor			Outdoor fan motor	Indoor blower motor	MCA ¹	Max fuse ² / breaker ³ size
		RLA	LRA	MCC	FLA	FLA		
36050, 36075	460-3-60	3.8	31.0	6.0	0.87	1.95	7.6	15
36100	460-3-60	3.8	31.0	6.0	0.87	3.15	8.8	15
48065, 48100, 48125	460-3-60	6.0	60.0	9.3	0.87	3.15	11.5	15
60065, 60100, 60125	460-3-60	6.3	60.0	9.9	0.87	3.20	12.0	15

1. Minimum Circuit Ampacity.
 2. Maximum Over Current Protection per standard UL 1995.
 3. Fuse or HACR circuit breaker is field installed.

Table 7: Physical data

Models		PCG4A36			PCG4B48			PCG4B60		
Nominal tonnage		3.0			4.0			5.0		
Refrigerant information	Refrigerant type	R-410A			R-410A			R-410A		
	Refrigerant charge (lb-oz)	7-0			7-14			10-2		
AHRI gas heat performance	Heating model	50	75	100	65	100	125	65	100	125
	Heat input (kBtu)	50.0	75.0	100.0	65.0	100.0	125.0	65.0	100.0	125.0
	Heat output (kBtu)	40	60	80	52	80	100	52	80	100
	AFUE (%)	81.0	81.0	81.0	81.0	81.0	81.0	81.0	81.0	81.0
	Number of burners	2	3	4	2	3	4	2	3	4
	Number of stages	1	1	1	1	1	1	1	1	1
	Temperature rise range (°F)	35–65	40–70		40–70			40–70		
	Maximum static pressure W.C.	0.5			0.5			0.5		
	Maximum outlet air temperature (°F)	180			180			180		
Gas piping connection (in.)	1/2			1/2			1/2			
Dimensions (in.)	Length	51 1/4			51 1/4			51 1/4		
	Width	35 3/4			45 3/4			45 3/4		
	Height	47			47			50		
Operating weight (lb)	359	379	383	450	456	460	469	475	479	
Compressor type	Scroll			Scroll			Scroll			
Outdoor coil data	Face area (ft ²)	15.3			17.5			21.1		
	Rows	2			2			2		
	Fins per inch	22			22			22		
	Tube diameter (mm)	7			7			7		
	Circuitry type	Interlaced			Interlaced			Interlaced		
Indoor coil data	Face area (ft ²)	4.6			6.2			6.2		
	Rows	3			3			4		
	Fins per inch	16			16			16		
	Tube diameter	3/8			3/8			3/8		
	Circuitry type	Interlaced			Interlaced			Interlaced		
	Refrigerant control	TXV			TXV			TXV		
Outdoor fan data	Fan diameter (in.)	24			26			26		
	Type	Prop			Prop			Prop		
	Drive type	Direct			Direct			Direct		
	Number of speeds	1			1			1		
	Motor hp	1/3			1/3			1/3		
	RPM	850			850			850		
	Nominal total CFM	2400			3200			3200		
Direct drive indoor blower data	Blower size (in.)	11 x 10			11 x 10			11 x 10		
	Type	Centrifugal			Centrifugal			Centrifugal		
	Motor hp	1/2	1		1			1		
	RPM	1400 maximum			1400 maximum			1400 maximum		
	Frame size	48			48			48		
Filter size	A			B			B			

Note: Field-supplied external filters must be sized so as not to exceed 300 fpm air velocity through disposable filters. All three-phase models include an internal filter rack kit and washable filters. Consult the instructions supplied with the kit for replacement filter sizes. Filter sizes: A= 20 in. x 20 in., B = 20 in. x 30 in.

Compressors

⚠ CAUTION

This system uses R-410A refrigerant, which operates at higher pressures than R-22. No other refrigerant may be used in this system.

The compressor used in this product is specifically designed to operate with R-410A refrigerant and cannot be interchanged.

⚠ CAUTION

Do not leave the system open to the atmosphere. Unit damage could occur due to moisture being absorbed by the POE oil in the system. This type of oil is highly susceptible to moisture absorption

The compressor uses polyolester (POE) oil, Mobil 3MA POE. This oil is extremely hygroscopic, meaning it absorbs water readily. POE oil can absorb 15 times as much water as other oils designed for HCFC and CFC refrigerants. If refrigerant circuit is opened, take all necessary precautions to avoid exposure of the oil to the atmosphere.

⚠ CAUTION

Exposure, even if immediately cleaned up, may cause embrittlement (leading to cracking) to occur in one year or more. When performing any service that may risk exposure of compressor oil to the roof, take precautions to protect roofing.

POE (polyolester) compressor lubricants are known to cause long-term damage to some synthetic roofing materials.

Procedures that risk oil leakage include, but are not limited to, replacing the compressor, repairing refrigerant leaks, and replacing refrigerant components such as filter drier, pressure switch, metering device, or coil.

⚠ CAUTION

Do not loosen compressor mounting bolts.

Units are shipped with compressor mountings that are factory-adjusted and ready for operation.

Phasing

⚠ CAUTION

Scroll compressors require proper rotation to operate properly. Failure to check and correct rotation may result in property damage.

Three-phase scroll compressors operate in only one direction. If the scroll is drawing low amperage, has similar suction and discharge pressures, or is producing a high noise level, the scroll is out of phase. Change the incoming line connection phasing to obtain the proper rotation.

Gas heat

These single stage gas-fired heat sections have direct spark ignition.

Gas piping

NOTICE

There may be a local gas utility requirement specifying a minimum diameter for gas piping. All units require a 1/2 in. pipe connection at the gas valve.

Proper sizing of gas piping depends on the ft³/h of gas flow required, specific gravity of the gas, and the length of run. National Fuel Gas Code Z223.1 or CSA B149.1 must be followed in all cases unless superseded by local codes or gas company requirements. See Table 8

and Table 9. The Btu content of the gas may differ with locality. Check the value with the local gas utility.

Gas connection

The gas supply line must be routed through the 1 5/8 in. hole located on the right side of the unit. See Figure 3 and Figure 4 for the location. The unit is supplied with a rubber grommet that fits in this hole and is used to seal around the gas pipe. **This grommet must be installed to prevent leakage of air and water into the heating/controls compartment.**

Gas piping requirements:

- A drip leg and a ground joint union must be installed in the gas piping.
- When required by local codes, a manual shut-off valve must be installed outside of the unit.

⚠ WARNING

Natural gas may contain some propane. Propane being an excellent solvent, will quickly dissolve white lead or most standard commercial compounds. Therefore, a special pipe thread sealant must be applied when wrought iron or steel pipe is used. Compounds such as RectorSeal No. 5 or equivalent compounds may be used.

⚠ CAUTION

If flexible stainless steel tubing is allowed by the authority having jurisdiction, wrought iron or steel pipe must be installed at the gas valve and extend a minimum of 2 in. outside of the unit casing.

- Use wrought iron or steel pipe for all gas lines. Apply pipe thread sealant sparingly to male threads only.

Table 8: Natural gas pipe sizing chart¹

Length (ft)	Nominal inches iron pipe size			
	1/2 in.	3/4 in.	1 in.	1 1/4 in.
10	132	278	520	1,050
20	92	190	350	730
30	73	152	285	590
40	63	130	245	500
50	56	115	215	440
60	50	105	195	400
70	46	96	180	370
80	43	90	170	350
90	40	84	160	320
100	38	79	150	305

1. Maximum capacity of pipe in ft³/h of gas (based upon a pressure drop of 0.3 in. W.C. and 0.6 specific gravity gas).

Table 9: Propane (LP) gas pipe sizing chart¹

Length (ft)	Nominal inches iron pipe size			
	1/2 in.	3/4 in.	1 in.	1 1/4 in.
10	275	567	1071	2,205
20	189	393	732	1496
30	152	315	590	1212
40	129	267	504	1039
50	114	237	448	913
60	103	217	409	834
70	96	196	378	771
80	89	185	346	724
90	83	173	322	677
100	78	162	307	630

1. Maximum capacity of pipe in thousands of Btu/h (based upon a pressure drop of 0.5 in. W.C.).

- All piping must be cleaned of dirt and scale by hammering on the outside of the pipe and blowing out the loose dirt and scale. Before initial start-up, ensure that all gas lines external to the unit have been purged of air.
- The gas supply must be a separate line and installed in accordance with all applicable safety codes. After the gas connections have been completed, open the main shut-off valve admitting normal gas pressure to the gas valve. Check all joints for leaks with soap solution or other material suitable for the purpose. **Never use an open flame.**

- The unit and its equipment shut-off valve must be disconnected from the gas supply system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.48 kPa).
- The unit must be isolated from the gas supply piping system by closing its individual manual shut-off valve before conducting any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psig (3.48 kPa).

⚠ WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow the safety warning exactly could result in serious injury, death, or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury, or loss of life.

Table 10: High altitude gas orifice sizing

Gas type	Cabinet size	Elevation above sea level (ft)								
		0–2000 (Factory)	2001–3000	3001–4000	4001–5000	5001–6000	6001–7000	7001–8000	8001–9000	9001–10000
Natural gas orifice sizes	B	36	37	38	38	39	40	41	41	42
	A	42	42	43	43	43	44	44	45	46
LP gas orifice sizes	B	51	51	52	52	52	52	53	53	53
	A	54	54	55	55	55	55	55	56	56

Flue vent and air intake hood

The flue vent hood and air intake hoods are shipped loose. These hoods must be installed to ensure proper unit operation. The hoods must be fastened to the outside of the side gas control/electrical compartment with the screws provided. See Figure 8.

⚠ WARNING

Flue hood surfaces may be hot.

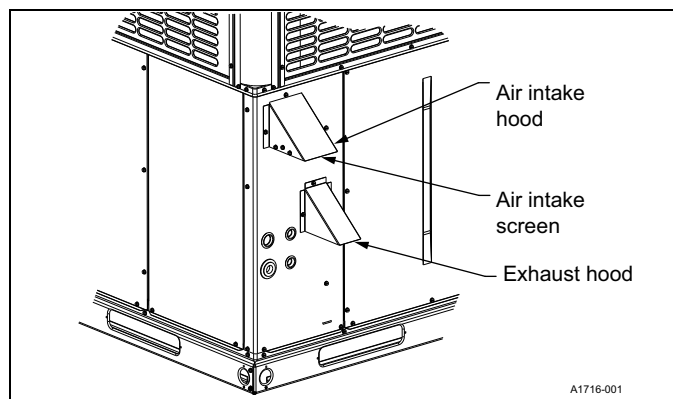


Figure 8: Flue vent outlet air hood

⚠ CAUTION

The flue exhaust hood must be properly installed and within the recommended clearances. Further communications and action must be given to the home or building owners to eliminate any unauthorized human contact around this area during the heating cycle. Flue hood surfaces and the immediate surrounding area reach high temperatures during the heating cycle.

Table 11: Natural gas application data

Available on models	Input (MBH) ¹	Output (MBH)	Gas rate ² ft ³ /h	Number of burners	Temperature rise °F ³	
					Minimum	Maximum
3 ton	50	41	46	2	35	65
4 ton, 5 ton	65	53	60	2	40	70
3 ton	75	61	70	3	40	70
3 ton	100	81	93	4	40	70
4 ton, 5 ton	100	81	93	3	40	70
4 ton, 5 ton	125	101	116	4	40	70

1. Heating capacity valid for elevations up to 2,000 ft above sea level. For elevations above 2,000 ft, rated capacity must be reduced by 4% for each 1,000 ft above sea level.

2. Based on 1,075 Btu/ft³.

3. The airflow must be adequate to obtain a temperature rise within the range shown. Continuous return air temperature must not be below 55°F.

Table 12: Propane¹ (LP) gas application data

Available on models	Input (MBH)	Output (MBH) ²	Gas rate ³ ft ³ /h High fire/low fire	Number of burners	Temperature rise °F ⁴		Propane conversion accessory kit
					Minimum	Maximum	
3 ton	50	41	20	2	35	65	S1-1NP0703
4 ton, 5 ton	65	53	26	2	40	70	S1-1NP0704
3 ton	75	61	30	3	40	70	S1-1NP0703
3 ton	100	81	40	4	40	70	S1-1NP0703
4 ton, 5 ton	100	81	40	3	40	70	S1-1NP0704
4 ton, 5 ton	125	101	50	4	40	70	S1-1NP0704

1. Propane applications are done by field installation of a Propane Conversion Accessory Kit. For more information, refer to the *Applications and accessories* section in the *Technical Guide*.

2. Heating capacity valid for elevations up to 2,000 ft above sea level. For elevations above 2,000 ft, rated capacity must be reduced by 4% for each 1,000 ft above sea level.

3. Based on 2,500 Btu/ft³.

4. The airflow must be adequate to obtain a temperature rise within the range shown. Continuous return air temperature must not be below 55°F.

Section V: Airflow performance

Table 13: Airflow performance - side duct application

Model	Motor speed	External static pressure (in. W.C.)								
		0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	1.0
		SCFM	SCFM	SCFM	SCFM	SCFM	SCFM	SCFM	SCFM	SCFM
PCG4A36050	Low (1)	850	790	710	660	610	560	510	450	400
	Medium Low (2)	1000	950	900	840	790	730	680	640	550
	Medium (3)	1270	1230	1190	1150	1110	1060	1000	960	860
	Medium High (4)	1370	1340	1300	1260	1220	1180	1130	1070	980
	High (5)	1490	1450	1420	1380	1340	1300	1260	1210	1120
PCG4A36075	Low (1)	850	790	710	660	610	560	510	450	400
	Medium Low (2)	1130	1090	1050	1000	940	890	830	790	700
	Medium (3)	1270	1230	1190	1150	1110	1060	1000	960	860
	Medium High (4)	1370	1340	1300	1260	1220	1180	1130	1070	980
	High (5)	1490	1450	1420	1380	1340	1300	1260	1210	1120
PCG4A36100	Low (1)	870	800	730	670	610	560	510	450	230
	Medium Low (2)	1220	1170	1130	1080	1030	970	920	860	780
	Medium (3)	1390	1350	1310	1270	1220	1180	1130	1080	970
	Medium High (4)	1520	1480	1440	1400	1360	1320	1270	1220	1110
	High (5)	1630	1590	1560	1520	1480	1440	1400	1350	1260
PCG4B48065	Low (1)	1090	1040	990	930	870	800	720	670	540
	Medium Low (2)	1140	1090	1030	980	920	850	780	730	600
	Medium (3)	1690	1650	1600	1570	1530	1490	1440	1400	1310
	Medium High (4)	1800	1760	1720	1680	1650	1610	1560	1520	1440
	High (5)	2020	1980	1940	1910	1870	1830	1790	1760	1690
PCG4B48100	Low (1)	1140	1090	1030	980	920	850	780	730	600
	Medium Low (2)	1520	1470	1430	1390	1340	1300	1250	1210	1090
	Medium (3)	1690	1650	1600	1570	1530	1490	1440	1400	1310
	Medium High (4)	1800	1760	1720	1680	1650	1610	1560	1520	1440
	High (5)	2020	1980	1940	1910	1870	1830	1790	1760	1690
PCG4B48125	Low (1)	1140	1090	1030	980	920	850	780	730	600
	Medium Low (2)	1690	1650	1600	1570	1530	1490	1440	1400	1310
	Medium (3)	1800	1760	1720	1680	1650	1610	1560	1520	1440
	Medium High (4)	1870	1840	1790	1760	1730	1690	1640	1600	1520
	High (5)	2020	1980	1940	1910	1870	1830	1790	1760	1690
PCG4B60065	Low (1)	1090	1020	960	910	840	750	690	640	550
	Medium Low (2)	1160	1100	1050	990	930	860	800	740	640
	Medium (3)	1870	1840	1810	1770	1730	1690	1650	1620	1540
	Medium High (4)	2000	1970	1930	1890	1860	1830	1780	1740	1670
	High (5)	2240	2210	2180	2150	2100	2070	2040	2010	1940
PCG4B60100	Low (1)	1300	1240	1200	1150	1090	1050	1000	940	820
	Medium Low (2)	1510	1470	1430	1390	1340	1310	1260	1220	1130
	Medium (3)	1870	1840	1810	1770	1730	1690	1650	1620	1540
	Medium High (4)	2000	1970	1930	1890	1860	1830	1780	1740	1670
	High (5)	2240	2210	2180	2150	2100	2070	2040	2010	1940
PCG4B60125	Low (1)	1300	1240	1200	1150	1090	1050	1000	940	820
	Medium Low (2)	1700	1670	1630	1590	1550	1520	1480	1440	1370
	Medium (3)	1870	1840	1810	1770	1730	1690	1650	1620	1540
	Medium High (4)	2000	1970	1930	1890	1860	1830	1780	1740	1670
	High (5)	2240	2210	2180	2150	2100	2070	2040	2010	1940

Notes:

Applications above 0.8 in. W.C. external static pressure are not recommended.

Brushless DC high-efficiency standard ECM blower motor is used for all indoor blower assemblies.

Heating applications are tested at 0.50 in. W.C. external static pressure. Cooling applications are tested per AHRI Standard 210/240.

The differences between side duct airflows and bottom duct airflows are insignificant.

Table 14: Additional static resistance

Size (ton)	CFM	Wet indoor coil	Economizer ¹	Filter/frame kit
PCG4A36 (3.0)	700	0.01	0.00	0.04
	800	0.02	0.01	0.06
	900	0.03	0.01	0.08
	1000	0.04	0.01	0.10
	1100	0.05	0.01	0.13
	1200	0.06	0.02	0.16
	1300	0.07	0.03	0.17
	1400	0.08	0.04	0.18
PCG4B48 (4.0)	1100	0.02	0.02	0.04
	1200	0.03	0.02	0.04
	1300	0.04	0.02	0.05
	1400	0.05	0.03	0.05
	1500	0.06	0.04	0.06
	1600	0.07	0.04	0.07
	1700	0.07	0.04	0.08
	1800	0.08	0.04	0.09
	1900	0.09	0.05	0.10
PCG4B60 (5.0)	1100	0.02	0.02	0.04
	1200	0.03	0.02	0.04
	1300	0.04	0.02	0.05
	1400	0.05	0.03	0.05
	1500	0.06	0.04	0.06
	1600	0.07	0.04	0.07
	1700	0.07	0.04	0.08
	1800	0.08	0.04	0.09
	1900	0.09	0.05	0.10
	2000	0.09	0.05	0.11

1. The pressure drop through the economizer is greater for 100% outdoor air than for 100% return air. If the resistance of the return air duct is less than 0.25 IWG, the unit delivers less CFM during full economizer operation.

Note: Filter pressure drop based on standard filter media tested at velocities not to exceed 300 ft/min.

Section VI: Operation

The unit is controlled by a conventional heating/cooling thermostat. If an electronic thermostat is used, make sure it has a common connection. **Do not** use a power-stealing thermostat.

Heating sequence of operation

Heating

The control board begins a call for heat when W is energized (connected to R).

The control checks to see if the pressure switch is open. If the pressure switch is closed, the control board flashes **2** on the LED and waits indefinitely for it to open. When the pressure switch is sensed as open, the control begins pressure switch proving period. If the call for heat is removed, the control goes back to Standby.

Pressure switch proving

The control board energizes the induced draft motor and waits for the pressure switch to close. When the pressure switch closes, the control begins pre-purge period. If the call for heat is removed, the control de-energizes the inducer without post-purge and returns to standby.

If the pressure switch does not close within 5 s of inducer energizing, the control board flashes **3** on the LED. If the pressure switch does not close within 60 s of inducer energizing, the control shuts off the inducer for 60 s, then energizes the inducer for another 60 s in an attempt to close the pressure switch. This cycle continues indefinitely until the pressure switch is proved closed or the call for heat ends.

Pre-purge

The control board monitors the pressure switch and ensures it remains closed during pre-purge. If the pressure switch opens, the control goes back to pressure switch proving mode. The control waits for a 15 s pre-purge period, then begins the ignition trial.

Ignition trial period

The control board energizes the gas valve and spark outputs for a 5 s ignition trial. The control de-energizes the spark when flame is sensed and enters a flame stabilization period.

If flame is not established within the ignition trial period, the control de-energizes the spark and gas valve and begins an inter-purge period before attempting another ignition trial.

If the call for heat is removed during an ignition trial period, the control immediately de-energizes spark and gas. The control runs the inducer motor through a post-purge period before de-energizing.

If the pressure switch opens during an ignition trial period, the control immediately de-energizes spark and gas. The control begins pressure switch proving before an inter-purge and reignition attempt.

Heat blower on delay

The control board waits for 30 s and then energizes the indoor blower heat speed. Blower on delay time begins at the start of flame proving period in the trial for ignition.

If the thermostat demand for heat is removed, the control de-energizes the gas valve, energizes the blower on heat speed, and initiates a post-purge and heat blower off delay.

Main burner operation

The control board keeps the main gas valve and induced draft motor energized while continuously monitoring the call for heat, pressure switch, and flame status.

If the call for heat (W) is removed, the control de-energizes the gas valve and begins post-purge and heat blower off delay.

If the pressure switch opens, the control de-energizes the gas valve and begins pressure switch proving mode.

If flame is removed, the control de-energizes the gas valve within 2.0 s and counts the flame loss. If flame has been lost less than 5 times, the control attempts re-ignition after a 15 s inter-purge period. If flame has been lost 5 times within the same call for heat, the control board locks out, flashing **8** on the LED.

Post-purge

The control board runs the induced draft motor for a 15 s post-purge period, and then de-energizes the inducer. If a call for heat occurs during post-purge, the control finishes the post-purge, and immediately begins the next ignition sequence.

Heat blower off delay

After a heating sequence, the control board de-energizes the indoor blower motor after a delay time as selected by a movable shunt (60 s, 90 s, 120 s, or 180 s). Blower off timing begins when the thermostat is satisfied and removes (W) the call for heat. The control returns to standby when the blower off delay is complete.

If the thermostat call for heat returns before the blower off delay is complete, the control begins an ignition sequence with pre-purge while the blower off delay continues.

Lockout

While in lockout, the control board keeps the main gas valve and induced draft motor de-energized.

Lockouts due to failed ignition or flame losses can be reset by removing the call for heat (W) for more than 1 second or removing power from the control for over 0.25 s. The control automatically resets lockout after 60 min.

Lockouts due to detected internal control faults reset after 60 min or power interruption. Cooling operations are available during a heating lockout.

High temperature limit switch

Any time the high temperature limit switch is open for less than 5 min, the control board runs the indoor blower motor on heat speed, runs the inducer, de-energizes the gas valve, and flashes **4** on the LED. When the high temperature switch closes, the control restarts the ignition sequence, beginning with pre-purge.

If the limit switch is open for more than 5 min, the control de-energizes the inducer, continues to operate the indoor blower motor on heat speed, and flashes **11** on the LED.

Rollout switch

If the limit circuit is open for more than 15 min, the control board flashes **5** on the LED. The blower output is energized during an open rollout condition.

If the rollout switch is reset, the control remains locked out until power is removed or a call for heat (W) is removed.

Rollout switch lockout does not reset automatically.

Power interruptions

Power interruptions of any duration do not cause lockout or any operation requiring manual intervention.

Flame present with gas off

If flame is sensed for longer than 4 s during a period when the gas valve should be closed, the control enters lockout, flashing **1** on the LED. The control energizes the inducer blower while the flame is sensed.

Gas valve fault

If the main valve output is sensed to be energized for more than 1 s when commanded to be off, the control de-energizes the induced draft motor (if flame is not present) to attempt to open the pressure switch to de-energize the gas valve. If the main gas valve is still sensed as energized after the inducer has been off for 10 s, the control re-energizes the inducer to vent the unburned gas. The control enters a hard lockout, flashing **10** on the LED.

The only way to recover from a hard lockout is to remove and reapply 24 VAC power to the control board.

Safety controls

The control circuit includes the following safety controls:

- Limit switch (LS) - This control is located inside the blower compartment and protrudes into the heat exchanger compartment. The limit switch is set to open at a temperature selected to prevent the outlet air temperature from exceeding the maximum shown on the unit rating plate. It resets automatically. The limit switch operates when a high temperature condition occurs. The limit switch shuts down the ignition control, closes the main gas valve, and energizes the blower.
- Pressure switch (PS) - If the draft motor fails, the pressure switch prevents the ignition control and gas valve from being energized.
- Flame sensor - The flame sensor is located on the left-most burner. If an ignition control fails to detect a signal from the flame sensor indicating the flame is properly ignited, the main gas valve closes.
- Rollout switch (RS) - This switch is located on the burner assembly. In the event of a sustained main burner flame rollout, the control closes the main gas valve. This is a manual reset type switch.

NOTICE

The manual reset Rollout switch (RS) must be reset before allowing furnace operation.

Gas heating fault codes

The gas heating section has built-in self-diagnostic capability. A blinking LED light on the control board can flash red, green, or amber to indicate various conditions. The control continuously monitors its own operation and the operation of the system. If a fault occurs, the LED light indicates the fault code.

The slow flash speed is 2 s on and 2 s off. The other flash codes listed below have the following timing: the LED light turns on for 1/3 s and off for 1/3 s. This pattern is repeated the number of times equal to the code. There is a 2 s pause between codes. For example, the **6 Red Flashes** fault code means the LED light flashes on and off six times and then remains off for 2 s. This pattern repeats as long as the fault condition remains. The continuous flash codes listed below mean the LED light flashes on and off continuously with no breaks or longer pauses.

Slow green flash: Indicates normal operation with no thermostat calls. Standby mode

Slow amber flash: Indicates normal operation with a call for heat

LED steady off: If the LED light does not flash at all, check for power to the control board and check for an open fuse on the control board. If the control board is properly powered and the fuse is not open, the control board may need to be replaced.

Steady on red: Indicates a possible control failure. Turn the power to the furnace off and back on. If the fault code recurs, the control board must be replaced. The control board is not field-repairable.

Rapid amber flash: Indicates the flame sense current is below 1.5 VDC. Check and clean the flame sensor. Check for proper gas flow. Verify that the current is greater than 1.5 VDC at the flame current test pad.

4 amber flashes: Indicates the control is receiving a Y signal from the thermostat without a G signal. The furnace operates normally during heating and cooling, but this fault code is displayed to alert the user that there is a wiring problem. Verify that the G wire from the thermostat is connected properly.

1 red flash: Indicates flame was sensed when there was no call for heat. The control turns on both the inducer motor and supply air blower. Check for a leaking or slow-closing gas valve.

2 red flashes: Indicates the pressure switch is closed when it should be open. The control confirms the pressure switch contacts are open at the beginning of each heat cycle. The control prevents the ignition sequence from continuing if the pressure switch contacts are closed when they should be open. Check for a faulty pressure switch or miswiring.

3 red flashes: Indicates the pressure switch contacts are open when they should be closed. Check for the following:

- Faulty inducer
- Blocked vent
- Broken pressure switch hose
- Disconnected pressure switch or inducer wires
- Faulty pressure switch

4 red flashes: Indicates the main limit or rollout switch has opened its contacts, which are normally closed. The control turns on the supply air blower and inducer. Check for the following:

- Dirty filter
- Improperly sized duct system
- Incorrect blower speed setting
- Incorrect firing rate
- Loose limit switch or rollout switch wiring
- Faulty blower motor

If the limit switch does not close within 5 min, the control operates as if the blower is not functioning. The control starts a hard lockout and flashes the **11** red flashes fault code.

If the limit switch does not close after 15 min, the control operates as if a manual-reset rollout switch has opened, and flashes the **5** red flashes fault code. See the **5** red flashes and **11** red flashes descriptions below. If the main limit switch opens five times within a single call for heat, the control flashes the **4** red flashes fault code and enters a 1 h soft lockout.

5 red flashes: Indicates the limit circuit has been open for more than 15 min, usually meaning that a manual-reset rollout switch has opened. Check for proper combustion air, proper inducer operation, primary heat exchanger failure, or a burner problem. The control enters a hard lock-out. After the problem is corrected, you must turn the power off and back on to reset the control.

6 red flashes: Indicates that while the unit was operating, the pressure switch opened four times during the call for heat. Check for a faulty inducer, blocked vent, or faulty pressure switch. The furnace locks out for 1 h and then restarts.

7 red flashes: Indicates the flame could not be established during three attempts for ignition. Check that the gas valve switch is in the On position. Check for the following:

- Low gas pressure or no gas pressure
- Faulty gas valve
- Dirty or faulty flame sensor
- Faulty hot surface ignitor
- Loose wires
- Burner problem

The furnace locks out for 1 h and then restarts.

8 red flashes: Indicates the flame has been lost five times (four recycles) during the heating cycle. Check for low gas pressure, a dirty or faulty flame sensor, or a faulty gas valve. The furnace locks out for 1 h and then restarts.

9 red flashes: Indicates reversed line voltage polarity, a grounding problem, or reversed low voltage transformer wires. Check the polarity at the furnace and branch. Check the furnace grounding. Check that the flame probe is not shorted to chassis. The furnace does not start the ignition sequence until this problem is corrected.

10 red flashes: Indicates the gas valve is energized with no call for heat. As long as this condition exists, the main blower and the inducer blower run, and no ignition sequence starts. Check the gas valve and gas valve wiring.

11 red flashes: Indicates the limit circuit has remained open for more than 5 min and less than 15 min. This condition is usually caused by a failed blower motor or blower wheel. The control enters a hard lockout. After the problem is corrected, you must turn the power off and back on to reset the control.

Soft lockout: The control includes a soft lockout that resets automatically after 1 h. This provides protection for an unoccupied structure if a temporary condition causes a furnace malfunction, for example, if a temporary interruption in gas supply prevents the furnace from lighting. In this case, the control keeps trying to light each hour and resumes normal operation if the gas supply is restored.

Hard lockout: Some fault conditions cause a hard lockout, and you must turn the power to the control off and back on to reset the control. The control does not automatically restart.

Cooling sequence of operations

When the thermostat calls for COOL, the thermostat terminals G and Y are energized, which signals the compressor, outdoor fan, and indoor blower to run.

With a call for Y, the indoor circulating blower is energized at cooling speed.

When the thermostat is satisfied, terminals G and Y are de-energized, de-energizing the compressor and outdoor fan.

After a cool fan off delay timing of 60 s, the indoor circulating blower is de-energized.

Safety controls

The control circuit includes the following safety control:

High pressure switch (HP) - This switch protects against excessive discharge pressures due to a blocked outdoor coil or an outdoor motor failure (opens at 650 ± 25 psig and closes at 450 ± 25 psig).

The high pressure switch is specifically designed to operate with R-410A systems. R-22 pressure switches must not be used as replacements for R-410A pressure switches.

WARNING

The ability to properly perform maintenance on this equipment requires certain expertise, mechanical skills, tools, and equipment. If you do not possess these, do not attempt to perform any maintenance other than those procedures recommended in this Installation Manual. Failure to heed this warning could result in serious injury and possible damage to this equipment.

Indoor circulating blower

When the thermostat calls for FAN, the thermostat terminal G is energized, signaling the indoor circulating blower to run at the G-Speed airflow.

If a call for COOL occurs (Y), the indoor circulating blower switches to run at the Y-Speed airflow.

If a call for HEAT occurs (W), the indoor circulating blower switches to W-Speed after a 30 s delay.

When the thermostat ends the call for FAN, the thermostat terminal G is de-energized, de-energizing the indoor circulating blower.

Charging

To check or adjust the unit charge, follow these steps:

1. Connect a temperature probe to the compressor discharge line approximately 6 in. away from the compressor shell.
2. Connect a high side refrigerant pressure gauge to the unit discharge pressure port.
3. Record the discharge line temperature and discharge pressure. Using an R-410A temperature pressure chart, convert the gauge pressure to saturation temperature. The difference between discharge saturation temperature and discharge line temperature is discharge superheat.
4. Obtain an entering indoor wet bulb temperature reading.
5. Compare readings taken to the unit charging chart.

Start-up

Prestart check list

Complete the following checks before starting the unit.

- Check the type of gas being supplied. Ensure that it is the same as listed on the unit nameplate.
- Ensure that the vent outlet air hood and air intake hood have been correctly installed.

Operating instructions

1. **Stop.** Read the safety information on the unit label.
2. Set the thermostat to the **OFF** position.
3. Turn off all electrical power to the unit.

WARNING

Do not try to light the burners by hand. This appliance is equipped with an ignition device that automatically lights the burners.

4. Remove the control access panel.
5. Turn the gas valve switch to the **OFF** position.
6. Wait 5 min to clear out any gas. If you then smell gas, **stop.** Follow B in the safety information on the unit label. If you do not smell gas, go to the next step.
7. Turn the gas valve switch to the **ON** position.
8. Replace the control access panel.
9. Turn on all electric power to the unit.
10. Set the thermostat to the required setting.
11. If the unit does not operate, follow the instructions in the *Turning off gas to unit* section and call your service technician or gas supplier.

Turning off gas to unit

1. Set the thermostat to the **OFF** position.
2. Turn off all electric power to the appliance if service is to be performed.

- Remove the control access panel.
- Turn the gas valve switch to the **OFF** position. **Do not force.**
- Replace the control access panel.

Post start check list

After the entire control circuit has been energized and the heating section is operating, make the following checks:

- Check for gas leaks in the unit piping as well as the supply piping.
- Check for correct manifold gas pressures. See the *Checking gas heat input* section.
- Check the supply gas pressure. It must be within the limits shown on rating nameplate. Supply pressure must be checked with all gas appliances in the building at full fire. At no time must the standby gas line pressure exceed 13.5 in. W.C., nor the operating pressure drop below 4.5 in. W.C. for natural gas units. If gas pressure is outside these limits, contact the local gas utility for corrective action.

Compressor rotation

CAUTION

Scroll compressors require proper rotation to operate properly. Failure to check and correct rotation may result in property damage.

Three-phase scroll compressors operate in only one direction. If the scroll is drawing low amperage, has similar suction and discharge pressures, or is producing a high noise level, the scroll is out of phase. Change the incoming line connection phasing to obtain the correct rotation.

Adjustment of manifold gas pressure and input rate

Inlet and manifold gas pressure can be measured by connecting the U tube manometer to the gas valve with a piece of tubing. Follow the appropriate section in the instructions below. See Figure 9 for the locations of the pressure ports on the gas valve.

Turn off gas at the ball valve or gas cock on the gas supply line before the gas valve, and turn off the electrical supply. Find the pressure ports on the gas valve marked Out P and In P.

- The manifold pressure must be taken at the port marked OUT P.
- The gas line pressure must be taken at the port marked IN P.
- Using a 3/32 in. (2.4 mm) hex head wrench, loosen the set screw by turning it one turn counter clockwise. Do not remove the set screw from the pressure port.

Read the inlet gas pressure

Connect the positive side of the manometer to the IN P Tap on the gas valve. Do not connect any tubing to the negative side of the manometer, because it references atmospheric pressure. See Figures 9 and 10 for connection details.

- Turn gas and electrical supplies on and follow the operating instructions to place the unit back in operation.

Table 15: Inlet gas pressure range

Inlet gas pressure range		
	Natural gas	Propane (LP)
Minimum	4.5 in. W.C. (1.12 kPa)	8.0 in. W.C. (1.99 kPa)
Maximum	10.5 in. W.C. (2.61 kPa)	13.0 in. W.C. (3.24 kPa)

Important: The inlet gas pressure operating range table specifies what the minimum and maximum gas line pressures must be for the furnace to operate correctly. The gas line pressure **must be** a minimum of:

- 7 in. W.C. (1.74 kPa) for Natural gas
- 11 in. W.C. (2.74 kPa) for Propane (LP) gas

This is in order to obtain the Btu input specified on the rating plate and/or the nominal manifold pressure specified in these instructions and on the rating plate.

- Once the correct gas inlet pressure has been established (see Table 15), turn the gas valve to **OFF** and turn the electrical supply switch to **OFF**. Remove the flexible tubing from the gas valve pressure tap and tighten the pressure tap plug using the 3/32 in. (2.4 mm) hex head wrench.
- Turn the electrical and gas supplies back on, and with the burners in operation, check for gas leakage around the gas valve pressure port using an approved noncorrosive gas leak detection fluid or other nonflammable leak detection methods.

Read the manifold gas pressure

Connect the positive side of the manometer to the OUT P Tap on the gas valve. Do not connect any tubing to the negative side of the manometer, because it references atmospheric pressure. See Figure 9 and Figure 10 for connection details.

Important: The cap for the pressure regulator must be removed entirely to gain access to the adjustment screw. Loosening or tightening the cap does not adjust the flow of gas.

NOTICE

The regulated outlet pressure has been calibrated at the factory. Additional pressure adjustment should not be necessary. If adjustment is necessary, set to the following specifications. After adjustment, check for gas leakage.

- See Figure 9 for location of pressure regulator adjustment cap and adjustment screws on main gas valve.
- Turn gas and electrical supplies on and follow the operating instructions to place the unit back in operation.
- Adjust manifold pressure by adjusting gas valve regulator screw for the appropriate gas per Table 16.

Table 16: Nominal manifold pressure

Nominal manifold pressure	
Natural gas	3.5 in. W.C. (0.87 kPa)
Propane (LP) gas	10.0 in. W.C. (2.488 kPa)

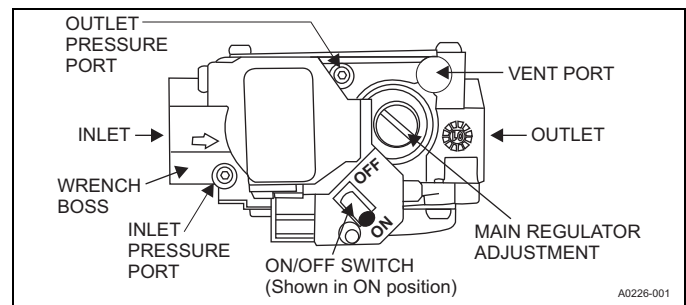


Figure 9: Gas valve

Important: If gas valve regulator is turned in (clockwise), manifold pressure is increased. If screw is turned out (counterclockwise), manifold pressure will decrease.

- After the manifold pressure has been adjusted, re-calculate the furnace input to make sure you have not exceeded the specified input on the rating plate. See *Natural gas* in the *Checking gas heat input* section.
- Once the correct Btu (kW) input has been established, turn the gas valve to **OFF** and turn the electrical supply switch to **OFF**. Remove the flexible tubing from the gas valve pressure tap and tighten the pressure tap plug using the 3/32 in. (2.4 mm) hex head wrench.
- Turn the electrical and gas supplies back on, and with the burners in operation, check for gas leakage around the gas valve pressure port using an approved noncorrosive gas leak detection fluid or other nonflammable leak detection methods.

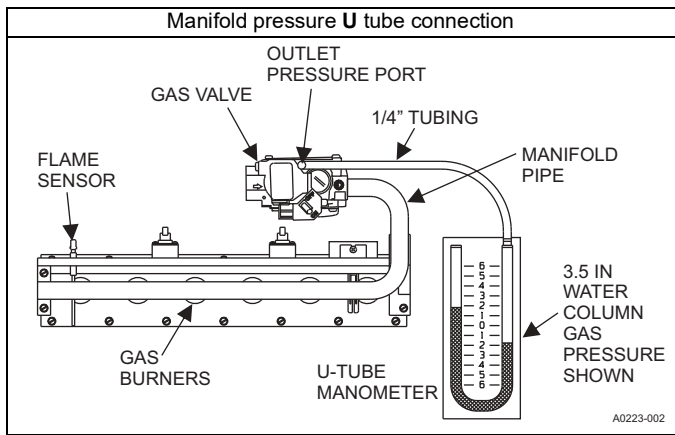


Figure 10: Reading gas pressure

Adjustment of temperature rise

⚠ DANGER

The temperature rise, or temperature difference between the return air and the supply (heated) air from the furnace, must be within the range shown on the furnace rating plate and within the application limitations shown in Table 7.

The supply air temperature cannot exceed the **“Maximum Supply Air Temperature”** specified in these instructions and on the furnace rating plate. Under NO circumstances can the furnace be allowed to operate above the Maximum Supply Air Temperature. Operating the furnace above the Maximum Supply Air Temperature will cause premature heat exchanger failure, high levels of Carbon Monoxide, a fire hazard, personal injury, property damage, and/or death.

After about 5 min of operation, determine the furnace temperature rise. Take readings of both the return air and the heated air in the ducts about 6 ft (1.8 m) from the furnace, where they are not affected by radiant heat. Increase the blower speed to decrease the temperature rise. Decrease the blower speed to increase the rise.

Direct drive blower

All units have direct drive, multi-speed standard ECM blower motors. Connect manometer as per the *Measuring external static pressure* section. Place the unit in cooling mode and adjust the blower speed accordingly as shown in Table 13.

Measuring external static pressure

1. Measure the supply air static pressure and record this positive number.
2. Measure the return air static pressure and record this negative number.
3. Treat the negative number as a positive and add the two numbers together. This is the total external static pressure.

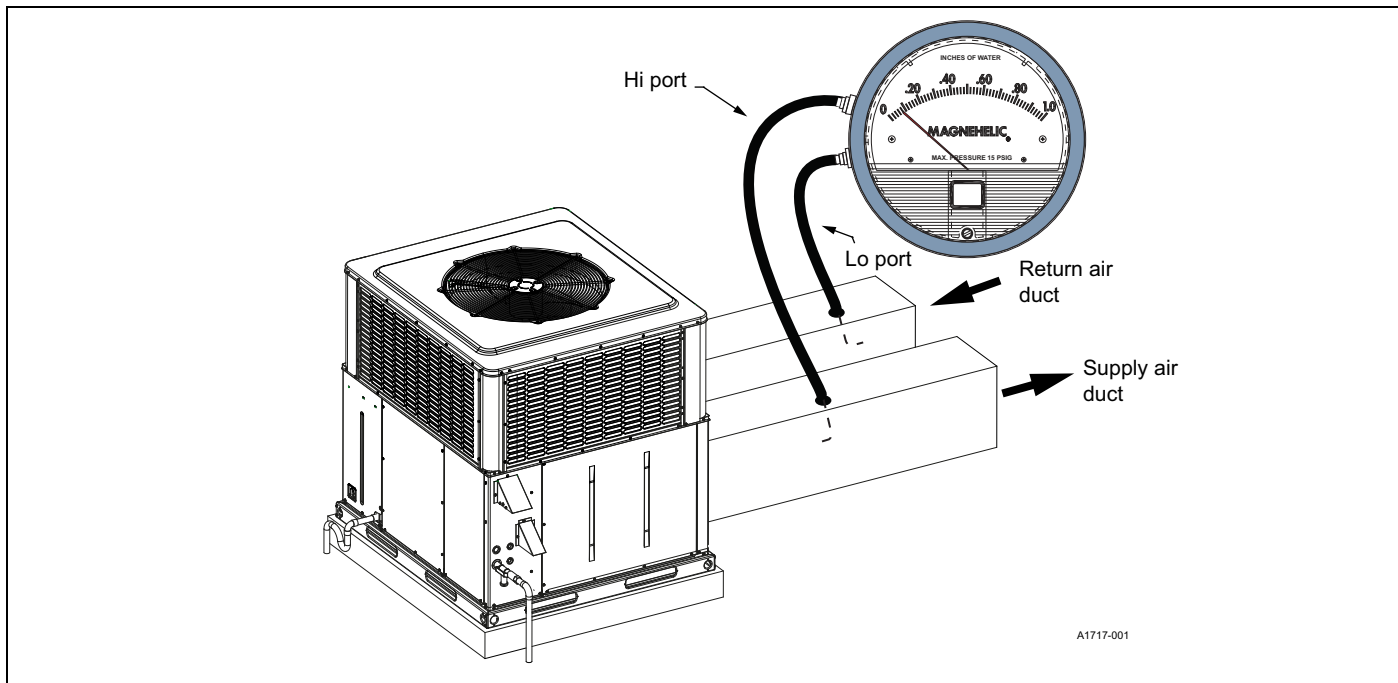


Figure 11: Measuring external static pressure

Checking gas heat input

Natural gas

1. Turn off all other gas appliances connected to the gas meter.
2. With the unit turned on, measure the time needed for one revolution of the hand on the smallest dial on the meter. A typical gas meter usually has a 1/2 ft³ or a 1 ft³ test dial.
3. Using the number of seconds for each revolution and the size of the test dial increment, find the ft³/h of gas consumed from Table 17.

If the actual input is not within 5% of the unit heating rating with allowance being made for the permissible range of the regulator setting, replace the orifice spuds with spuds of the proper size.

NOTICE

To find the Btu input, multiply the number of ft³/h of gas consumed per hour by the Btu content of the gas in your particular locality. (Contact your gas company for this information since it varies widely from city to city.)

Example of how to use Table 17

By actual measurement, it takes 38 s for the hand on the 1 ft³ dial to make a revolution with just a 100,000 Btu/h furnace running. Using this information, locate 38 s in the first column of Table 17. Read across to the 1 ft³ column, where you see that 95 ft³/h of gas are consumed by the furnace at that rate. Multiply 95 x 1050 (or the Btu rating of the gas obtained from the local gas company). The result is 99,750 Btu/h, which is close to the 100,000 Btu/h rating of the unit.

Table 17: Gas rate (ft³/h)

Seconds for one revolution	Size of test dial	
	1/2 ft ³	1 ft ³
10	180	360
12	150	300
14	129	257
16	113	225
18	100	200
20	90	180
22	82	164
24	75	150
26	69	138
28	64	129
30	60	120
32	56	113
34	53	106
36	50	100
38	47	95
40	45	90
42	43	86
44	41	82
46	39	78
48	37	75
50	36	72
52	35	69
54	34	67
56	32	64
58	31	62
60	30	60

Third-Party Trademarks Notice: For information about third-party trademarks, refer to the relevant company websites.

Section VII: R-410A quick reference guidelines

See the installation instructions for specific installation requirements. It is important to be aware of the following:

- R-410A refrigerant operates at 50% to 70% higher pressures than R-22 refrigerant. Make sure that servicing equipment and replacement components are designed to operate with R-410A.
- R-410A refrigerant cylinders are rose-colored.
- The recovery cylinder service pressure rating must be 400 psig per *DOT-4BA400* or *DOT-BW400*.
- Recovery equipment must be rated for R-410A.
- **Do not** use R-410A service equipment on R-22 systems. All hoses, gauges, recovery cylinders, charging cylinders, and recovery equipment must be dedicated for use only on R-410A systems.
- Manifold sets must be at least 700 psig high side and 180 psig low side with 550 psig retard.
- All hoses must have a service pressure rating of 800 psig.
- Leak detectors must be designed to detect HFC refrigerants.
- Systems must be charged with liquid refrigerant. Use a commercial type of metering device in the manifold hose.
- R-410A can be used with only POE type oils.
- POE type oils rapidly absorb moisture from the atmosphere.
- Vacuum pumps do **not** remove moisture from R-410A refrigerant oils.
- **Do not** use liquid line driers with a rated working pressure rating less than 600 psig.
- **Do not** install suction line driers in the liquid line.
- A liquid line drier is required on every unit.
- **Do not** use an R-22 TXV. If a TXV is used, it must be an R-410A TXV.
- Never open the system to the atmosphere when under a vacuum.
- If the system must be opened for service, evacuate the system, then break the vacuum with dry nitrogen and replace all the filter driers.

Section VIII: Typical wiring diagrams

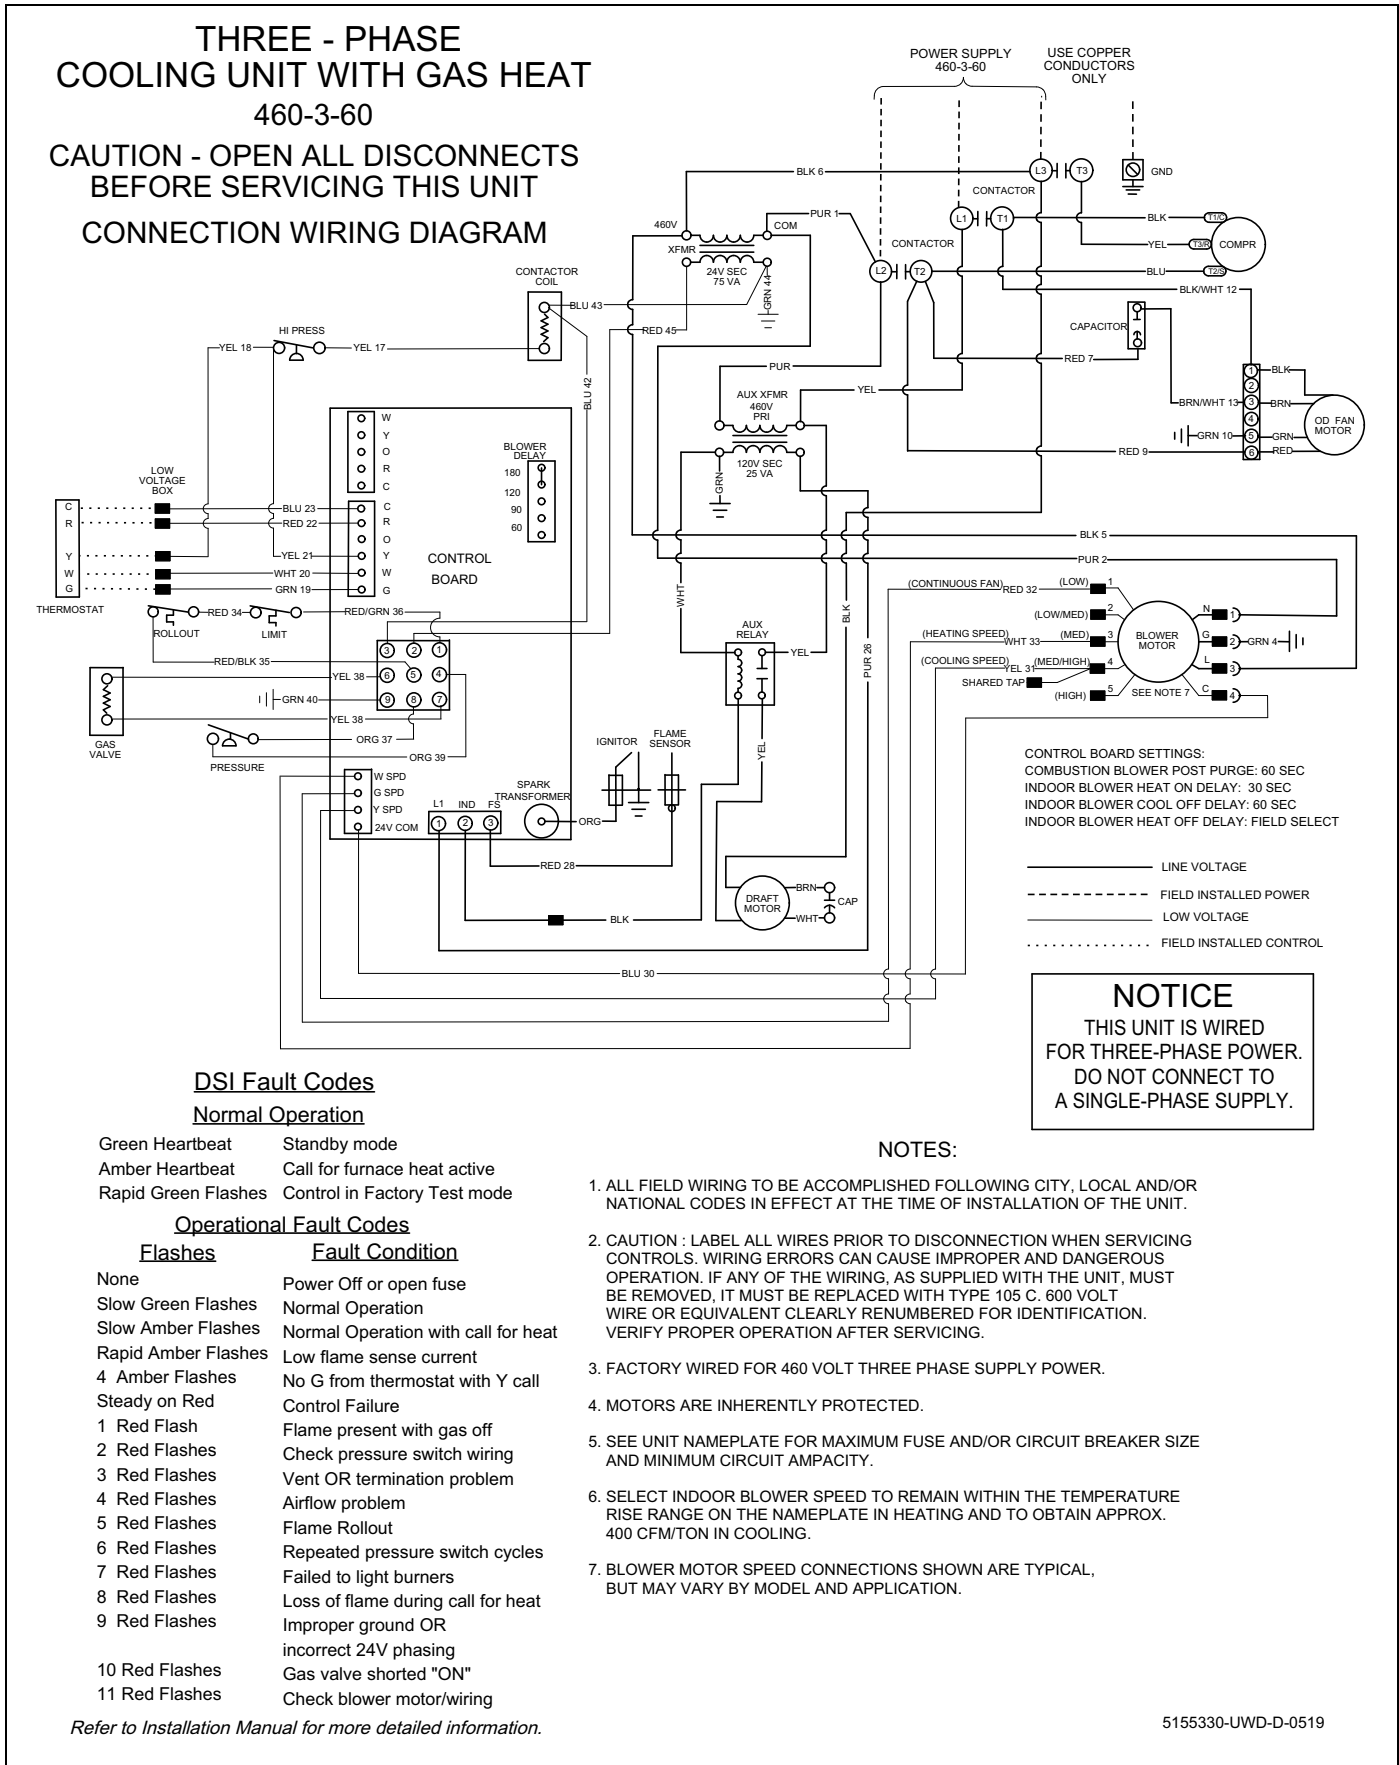


Figure 12: Connection wiring diagram

THREE - PHASE COOLING UNIT WITH GAS HEAT

460-3-60

LADDER WIRING DIAGRAM

**CAUTION - OPEN ALL DISCONNECTS
BEFORE SERVICING THIS UNIT**

DSI Fault Codes

Normal Operation

- Green Heartbeat Standby mode
- Amber Heartbeat Call for furnace heat active
- Rapid Green Flashes Control in Factory Test mode

Operational Fault Codes

Flashes	Fault Condition
None	Power Off or open fuse
Slow Green Flashes	Normal Operation
Slow Amber Flashes	Normal Operation with call for heat
Rapid Amber Flashes	Low flame sense current
4 Amber Flashes	No G from thermostat with Y call
Steady on Red	Control Failure
1 Red Flash	Flame present with gas off
2 Red Flashes	Check pressure switch wiring
3 Red Flashes	Vent OR termination problem
4 Red Flashes	Airflow problem
5 Red Flashes	Flame Rollout
6 Red Flashes	Repeated pressure switch cycles
7 Red Flashes	Failed to light burners
8 Red Flashes	Loss of flame during call for heat
9 Red Flashes	Improper ground OR incorrect 24V phasing
10 Red Flashes	Gas valve shorted "ON"
11 Red Flashes	Check blower motor/wiring


Refer to Installation Manual for more detailed information.

CONTROL BOARD SETTINGS:
 COMBUSTION BLOWER POST PURGE: 60 SEC
 INDOOR BLOWER HEAT ON DELAY: 30 SEC
 INDOOR BLOWER COOL OFF DELAY: 60 SEC
 INDOOR BLOWER HEAT OFF DELAY: FIELD SELECT

———— LINE VOLTAGE
 - - - - - FIELD INSTALLED POWER
 _____ LOW VOLTAGE
 FIELD INSTALLED CONTROL

NOTICE

THIS UNIT IS WIRED
FOR THREE-PHASE POWER.
DO NOT CONNECT TO
A SINGLE-PHASE SUPPLY.

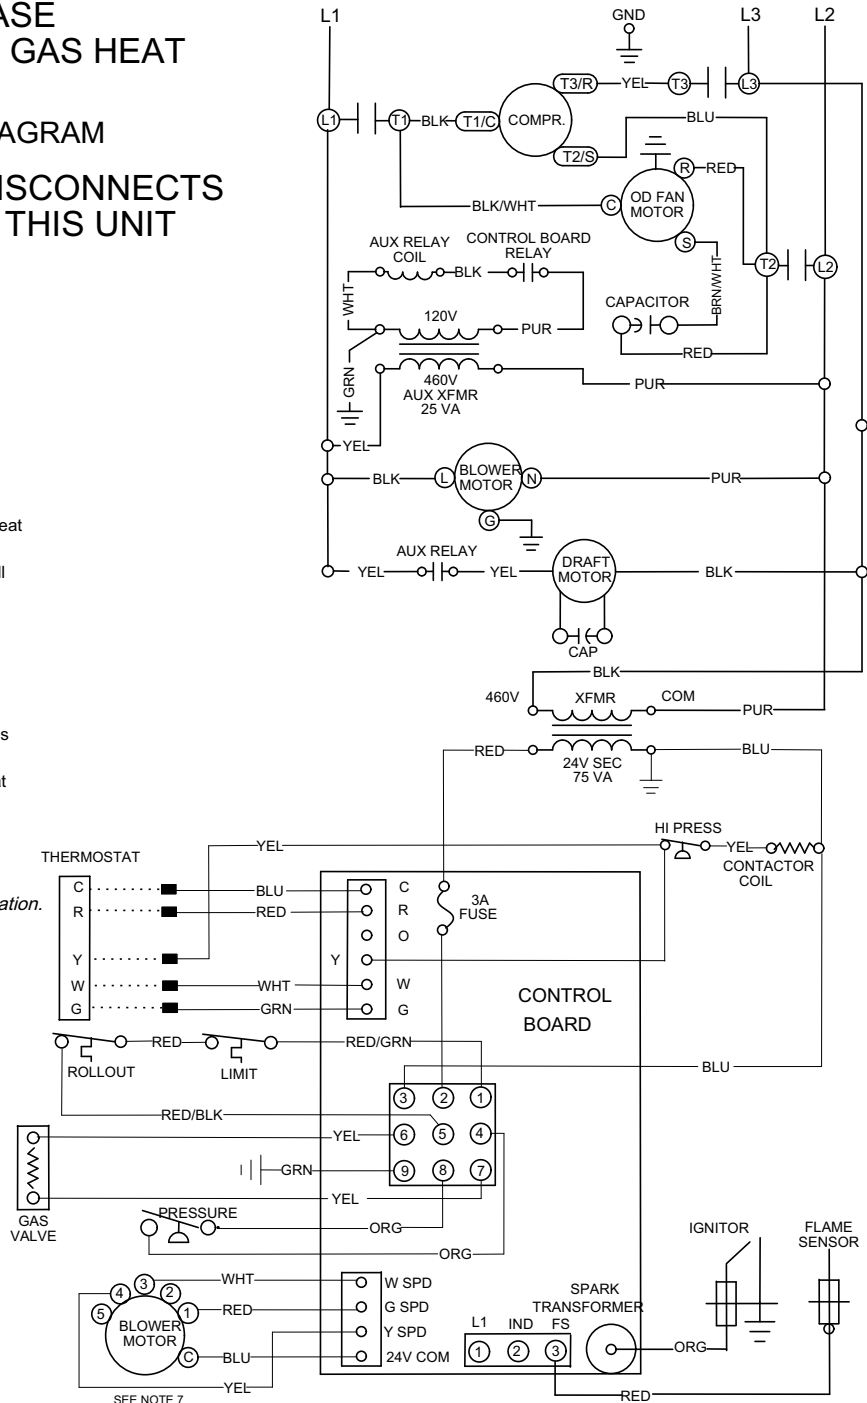

NOTES:

- ALL FIELD WIRING TO BE ACCOMPLISHED FOLLOWING CITY, LOCAL AND/OR NATIONAL CODES IN EFFECT AT THE TIME OF INSTALLATION OF THE UNIT.
- CAUTION : LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. WIRING ERRORS CAN CAUSE IMPROPER AND DANGEROUS OPERATION. IF ANY OF THE WIRING, AS SUPPLIED WITH THE UNIT, MUST BE REMOVED, IT MUST BE REPLACED WITH TYPE 105 C. 600 VOLT WIRE OR EQUIVALENT CLEARLY RENUMBERED FOR IDENTIFICATION. VERIFY PROPER OPERATION AFTER SERVICING.
- FACTORY WIRED FOR 460 VOLT THREE PHASE SUPPLY POWER.
- MOTORS ARE INHERENTLY PROTECTED.
- SEE UNIT NAMEPLATE FOR MAXIMUM FUSE AND/OR CIRCUIT BREAKER SIZE AND MINIMUM CIRCUIT AMPACITY.
- SELECT INDOOR BLOWER SPEED TO REMAIN WITHIN THE TEMPERATURE RISE RANGE ON THE NAMEPLATE IN HEATING AND TO OBTAIN APPROXIMATELY 400 CFM/TON IN COOLING.
- BLOWER MOTOR SPEED CONNECTIONS SHOWN ARE TYPICAL, BUT MAY VARY BY MODEL AND APPLICATION.

5155330-UWD-D-0519

Figure 13: Ladder wiring diagram

NOTES

Section IX: Start up sheet

Residential Package Unit Cooling / Gas Heat Start-Up Sheet

Proper start-up is critical to customer comfort and equipment longevity

Print Form

Reset Form

Start-Up Date Company Name Start-Up Technician

Owner Information

Name Address Daytime Phone
 City State or Province Zip or Postal Code

Equipment Data

Unit Model # Unit Serial #

General Information (Check all that apply)

<input type="radio"/> Residential	<input type="radio"/> New Construction	<input type="radio"/> Roof level	<input type="radio"/> Down flow
<input type="radio"/> Commercial	<input type="radio"/> Retrofit	<input type="radio"/> Grade level	<input type="radio"/> Side flow

Unit Location and Connections (Check all that apply)

Unit is level and installed on: Slab Roof curb Duct connections are complete: Supply Return
 Condensate drain properly connected per the installation instructions Condensate trap has been primed with water

Filters

Filters installed Number of filters Filter size Filter located inside Filter located outside

Additional Kits & Accessories Installed (Check all that apply)

Refrigerant safety kit Low ambient kit Anti-recycle timer Crank case heater Filter frame kit
 Transformer kit Economizer Roof curb kit Base rail hole blockage kit
 Manual fresh air damper kit Motorized fresh air damper kit

Electrical Connections & Inspection (Check all that apply)

Single phase Three phase 208 volts AC 230 volt AC 460 volts AC 575 volts AC
 Inspect wires and electrical connections Transformer wired properly for primary supply voltage Ground connected
 Low voltage present at control board "R & C" Measured voltage "R" and "C" outdoor unit control board
 Line voltage present at disconnect Measured voltage "L1 to L2" "L2 to L3" "L1 to L3"
 Compressor amperes "L1" "L2" "L3" Total amperes "L1" "L2" "L3"
 Single stage compressor Two stage compressor

Air Flow Setup / Cooling

Blower Type & Set-Up	<input type="radio"/> V.S. ECM	COOL <input type="radio"/> A <input type="radio"/> B <input type="radio"/> C <input type="radio"/> D
		ADJUST <input type="radio"/> A <input type="radio"/> B <input type="radio"/> C <input type="radio"/> D
		DELAY <input type="radio"/> A <input type="radio"/> B <input type="radio"/> C <input type="radio"/> D
	<input type="radio"/> ECM <input type="radio"/> 1 <input type="radio"/> 2 <input type="radio"/> 3 <input type="radio"/> 4 <input type="radio"/> 5	
<input type="radio"/> PSC <input type="radio"/> Low <input type="radio"/> Medium Low <input type="radio"/> Medium <input type="radio"/> Medium High <input type="radio"/> High		

Supply static (inches of water column) Supply air dry bulb temperature Outside air dry bulb temperature
 Return static (inches of water column) Return air dry bulb temperature Return air wet bulb temperature
 Total external static pressure Temperature drop Supply air wet bulb temperature

Refrigerant Charge and Metering Device

<input type="radio"/> R-410A <input type="radio"/> R-22	Data plate - lbs / Oz <input type="text"/>	Suction line temperature <input type="text"/>	Discharge pressure <input type="text"/>
<input type="radio"/> TXV <input type="radio"/> Fixed Orifice	Discharge line temperature <input type="text"/>	Suction pressure <input type="text"/>	Liquid line temperature <input type="text"/>
TXV# / Orifice size <input type="text"/>		Superheat <input type="text"/>	Subcooling <input type="text"/>

Gas Heat

<input type="radio"/> Single Stage <input type="radio"/> Two Stage	<input type="radio"/> Natural Gas <input type="radio"/> Propane LP (Requires LP Conversion Kit)
LP Gas Conversion Kit # <input type="text"/>	LP Conversion Kit Installed By <input type="text"/> Inlet Gas Pressure (w.c.) <input type="text"/>
Manifold Pressure at 100% Firing Rate (w.c.) <input type="text"/>	Measured BTU/H (Clock Gas Meter Nat Gas) <input type="text"/> Rated BTU/H <input type="text"/>
Manifold Pressure / Low Fire Rate (w.c.) <input type="text"/>	Return Air Dry Bulb Temp <input type="text"/> Supply Air Dry Bulb Temp <input type="text"/> Temp Rise <input type="text"/>
<input type="checkbox"/> Burner Flame Inspection - Blue flames extending directly into the primary heat exchanger cells	

Clean Up Job Site

Job site has been cleaned, indoor and outdoor debris removed from job site
 Tools have been removed from unit
 All panels have been installed

Unit Operation and Cycle Test

Operate the unit through continuous fan cycles from the thermostat, noting and correcting any problems
 Operate the unit through cooling cycles from the thermostat, noting and correcting any problems

Owner Education

Provide owner with the owner's manual
 Explain operation of system to equipment owner
 Explain thermostat use and programming (if applicable) to owner
 Explain the importance of regular filter replacement and equipment maintenance

Comments and Additional Job Details